


LED Linear Lighting System | T Line | K3

Safety notes:

Installation must be performed only by a qualified electrician.

Make sure that the fixture is disconnected from the AC supply.

This luminaire is to be installed in 3-wires/1-phases or 4-wires/3-phases or 6-wires/3-phases DALI track rails.

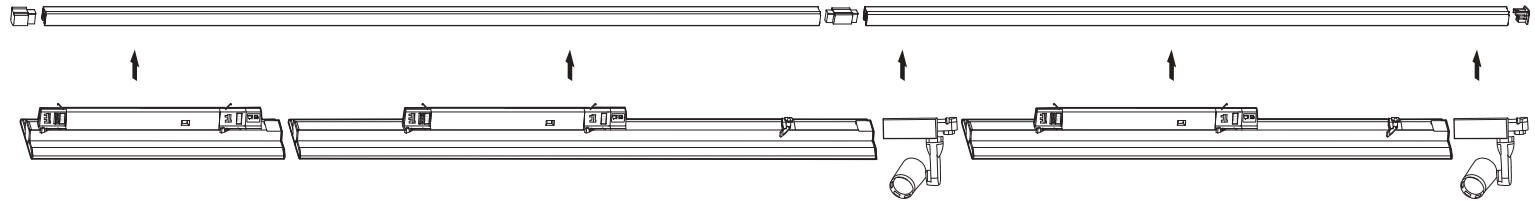


Features:

Perfect solution for the retail business, shops, and supermarkets. Excellent quality with high efficiency up to 160lm/W.

Four selectable powers with DIP switch.

Flexible position of the luminaire in the rail by sliding left or right.

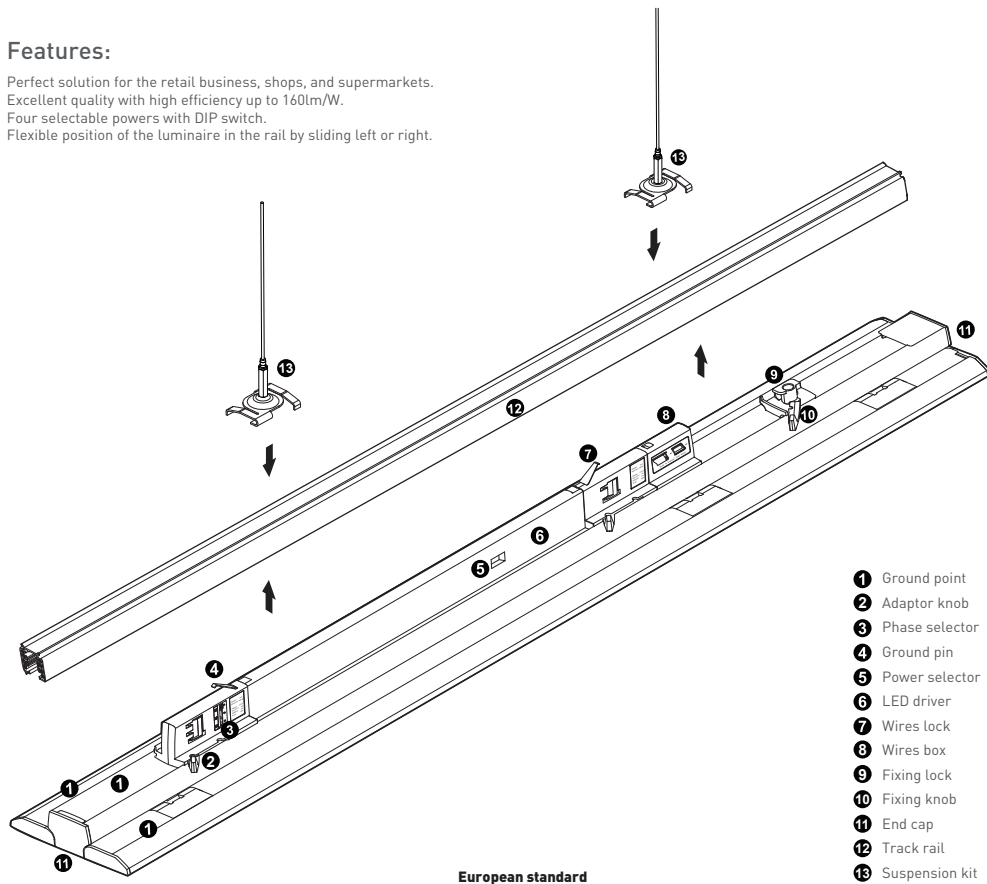


European standard

- 1 Ground point
- 2 Adaptor knob
- 3 Phase selector
- 4 Ground pin
- 5 Power selector
- 6 LED driver
- 7 Wires lock
- 8 Wires box
- 9 Fixing lock
- 10 Fixing knob
- 11 End cap
- 12 Track rail
- 13 Suspension kit


Step 1

Set the power in the **5 power selector** DIP switch.

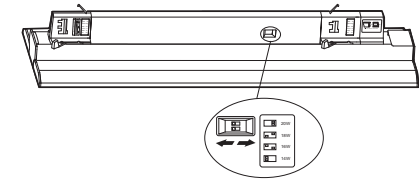


Step 2

Choose the phase/circuit in the **3 phase selector** DIP switch.

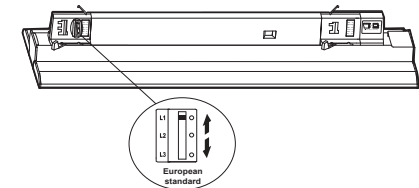


Step 3

Insert the T-line luminaire into the **12 track rail** with the correct direction.

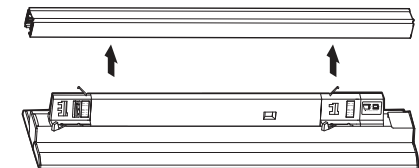

Step 4

Lock the luminaire with the **2 adaptor knob** and the **10 fixing knob** by rotating the knobs clockwise.

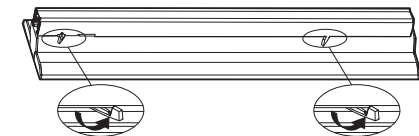

LED Linear Lighting System | T Line | K3


How to avoid the track rail joints during installation

There are 4 movable positions for the LED driver in the T-line luminaire.
There are 2 movable position of the fixing lock in the T-line luminaire.



If the **12 track rail** joint interferes with the position of the **9 Fixing lock**, follow the instruction of **Step 1**.

If the **12 track rail** joint interferes with the position of the **6 LED driver**, follow the instructions from **Step 2** to **Step 5**.

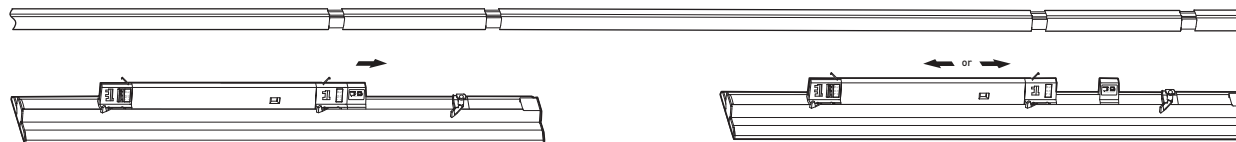

Step 2
Expose the wires in the **8 wires box** by moving it to the right.

Step 1
Slide the **9 fixing lock** left or right to the second position to avoid the **12 track rail** joint.


Step 3
Slide the **6 LED driver** left or right to a free position.



Step 4
Slide the **8 wires box** near the **6 LED driver**.
Tidy up the wires and hide them by sliding the **8 wires box** back.

Step 5
Install the T-Line luminaire into the **12 track rail**.

Luminaire installation guidance



Step 1
Install luminaire into the track rail



Step 2
Rotate the left side of the luminaire alone




Step 3
Rotate the right side of the luminaire alone



Step 4
Rotate both left and right sides of the luminaire

Track rail

3-wires/1-phases
4-wires/3-phases
6-wires/3-phases

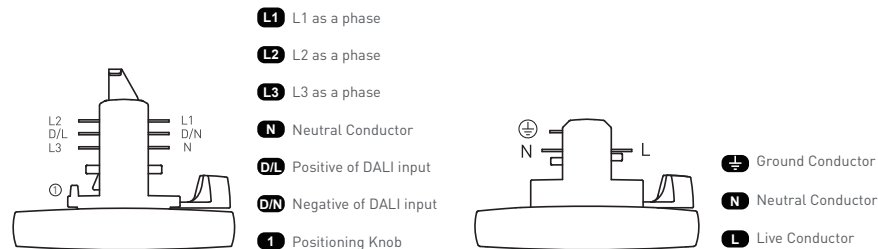

Recommend track rail brands

Pay attention to the positioning knob. No Reverse Mount!
Improper installation may cause irreparable damage.

